

**READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING WORK.
IF YOU DON'T UNDERSTAND CALL 724-588-8600 FOR ASSISTANCE.**


PROCEDURE FOR REPLACING BOOT STRAP

THIS KIT IS TO BE USED ONLY ON WERNER CO. PUMP JACKS



WARNING:


1. Failure to comply with all instructions may result in serious injury.
2. Make sure this kit fits your pump jack. Refer to the application chart on the outside of the kit's packaging. If you have any questions concerning the use of this kit on other Werner Co. products, call 724-588-8600 for assistance.
3. Before installing this kit, identify all kit components. If any components are missing or damaged, return the kit to place of purchase. Do not substitute any components.
4. Inspect the pump jack before installing this kit. Repair or replace any damaged or missing parts before using the pump jack. Use only Werner Co. repair or replacement parts. If unable to repair, discard the pump jack.

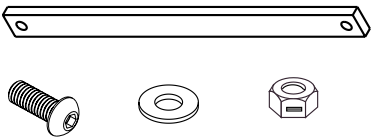COMPONENTS IN KIT	TOOLS REQUIRED
<p>(1) Boot Strap (2) Bolts (2) Washers (2) Nuts</p> 	<p>7/32" Allen Wrench 9/16" Wrench</p>

INSTRUCTIONS:


Removing Boot Strap:

- STEP 1.** Using 7/32" allen wrench on bolt and 9/16" wrench on nut, remove bolt, nut and washer from each side of boot strap as shown in Figures 1 & 2.
- STEP 2.** Remove boot strap from upper foot pump bracket.

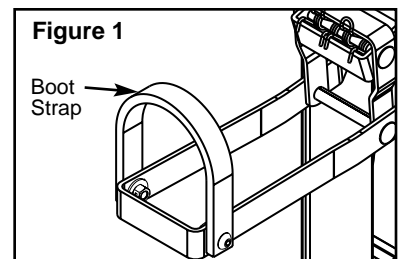

Installing Boot Strap:

- STEP 1.** Insert bolts through holes in boot strap, as well as through holes in upper foot pump bracket as shown in Figure 2.
- STEP 2.** Place washers on each bolt and tighten nuts onto washers as shown in Figure 1.
- STEP 3.** Ensure boot strap is able to pivot on upper foot pump bracket.

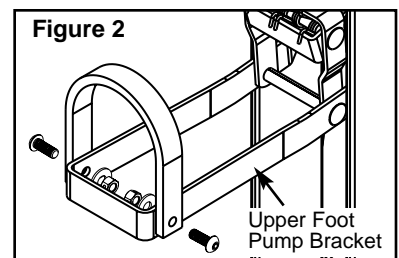

CAUTION: IF ANY PARTS ARE DAMAGED OR MISSING, CONTACT PLACE OF PURCHASE FOR REPLACEMENT KITS, IF AVAILABLE, OR DISCARD UNIT.



WERNER CO., 93 WERNER ROAD, GREENVILLE, PA 16125-9499
PHONE (724) 588-8600 www.wernerladder.com